




# SRL Solar PLUS

---

Set Up Guide

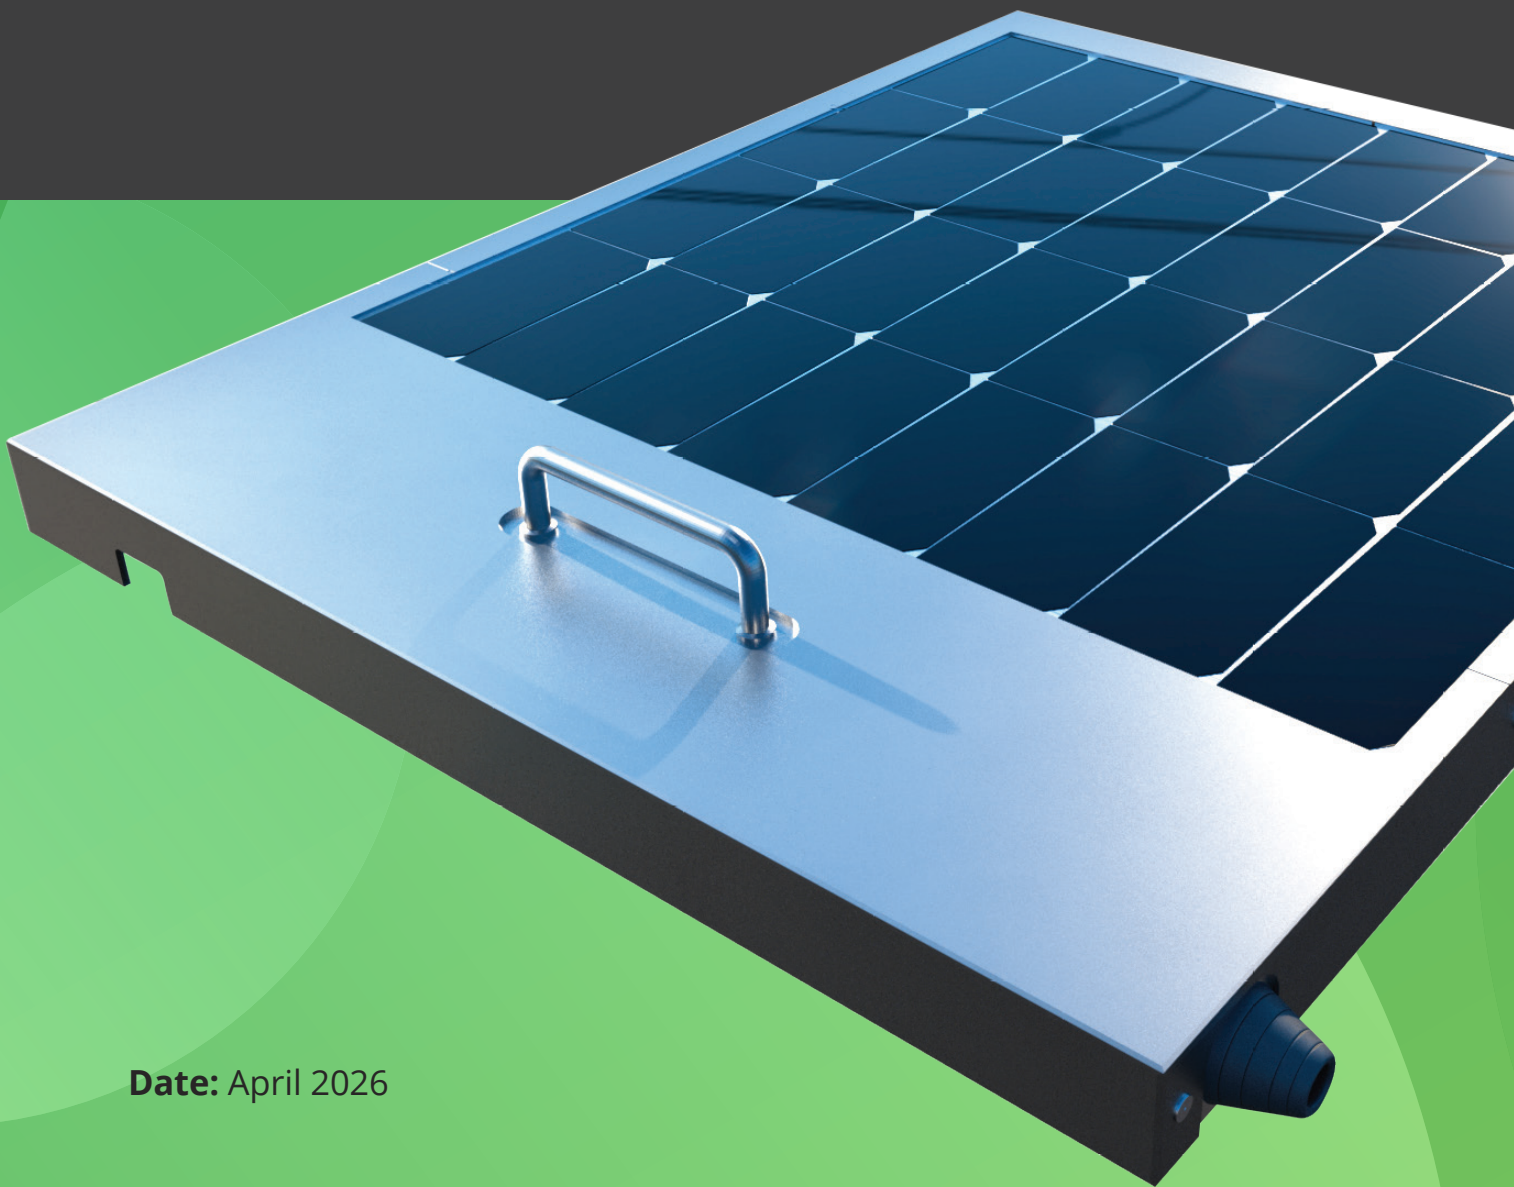

**Date:** April 2026

# Contents

---

|    |   |       |
|----|---|-------|
| 1. | <b>Introduction</b>   | Pg. 3 |
| 2. | <b>Connecting to and setting up the Victron Energy<br/>Smart Solar Charge controller MPPT 75 / 10</b> | Pg. 4 |
| 3. | <b>Version Control</b>  | Pg. 9 |


# 1 | Introduction

---

**The Solar lid and assembly once complete is ready to plug into various assets and also has the potential to connect to a variety of batteries.**

The aim of this document is to aid the successful setup of the solar regulator which is housed within the solar box.

This setting up can be achieved via remotely accessing using a smart device over Bluetooth connection. The Bluetooth name of the regulator is to match the asset number assigned to the Solar lid assembly.

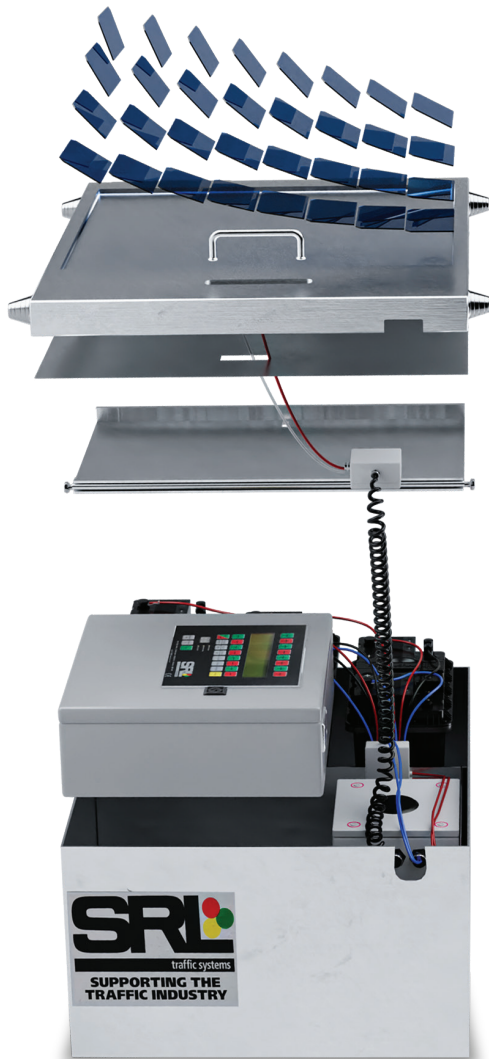

## 2 | Connecting to and setting up the solar charge controller

Ensure that initially only one solar panel is powered up for connection and setup before powering the next one. This will enable you to setup the correct solar regulator and its associated fleet number.

Download the Victron Connect which has this symbol.




Ensure your Bluetooth is on and open the application, search Device list - Local - look for SmartSolar \*\*\*\*\* MPPT 75/10.

Select the equipment you want to set up and wait while it connects. Enter the default pin - 000000 and again wait while it further connects.

If a prompt to update firmware appears then click yes.


You will then come across this message which is giving you the opportunity to change the devices PIN code.

Select Change Pin Code and change it to the fleet number provided to the solar assembly - all digits in the fleet number starting with a 0 as it has to be a 6 digit pin number.

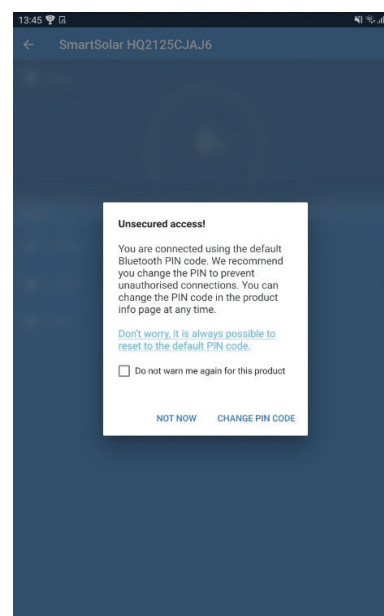

## 2 | Connecting to and setting up the solar charge controller

Select settings in the top right of the screen followed by the 3 inline dots in the top right, followed by Product info.

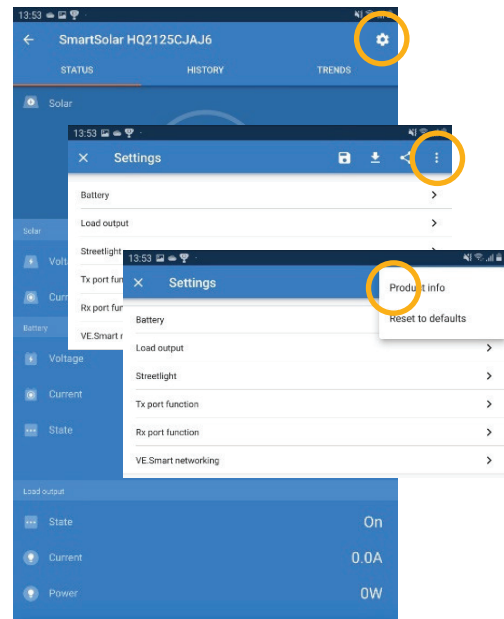


In Product info the top custom name is to be change by clicking edit.

Change the name of this device to match the fleet number provided to the solar assembly including any letters and numbers.


While on this page it is good practice to select both updates to ensure all firmware is up to date.

Once complete, navigate back to the settings page.

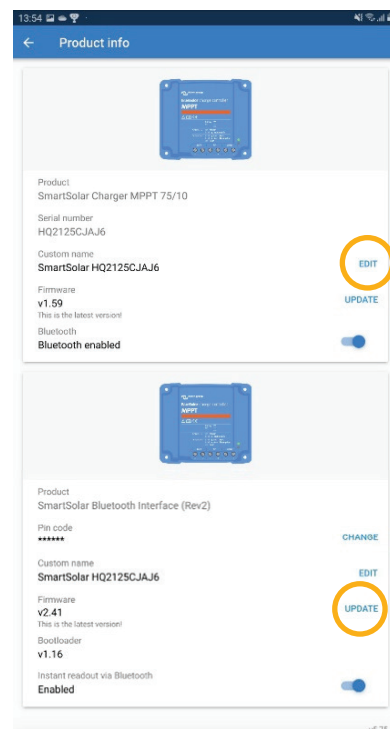

# 2 | Connecting to and setting up the solar charge controller

Select Load Output and ensure Operation mode is selected to **Always on**.

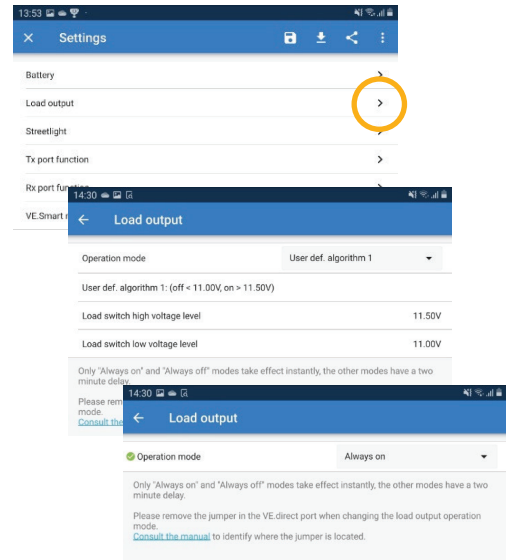


Once complete, navigate back to the settings page. The final step is to input all the Battery information to ensure optimised charging of the battery. Select Battery to reveal the following list -

Activate Expert Mode

Use the table on the next page to populate this page according to which battery is being used with this system.

**Don't** Click Start Now

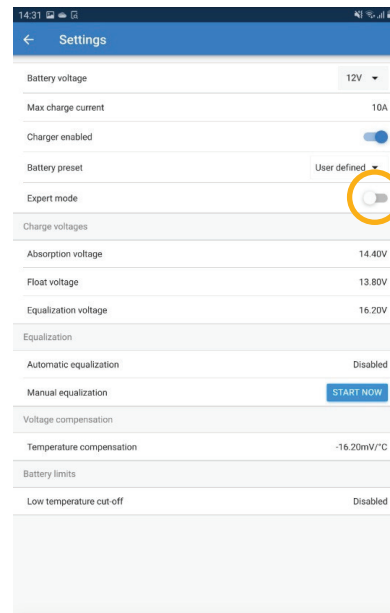

## 2 | Connecting to and setting up the solar charge controller

|  | Yellow Top SRL battery | AGM 12/100   |
|--|------------------------|--------------|
| <b>Max Charge Current - x</b>                            | 10a                    | 10a          |
|  |                        |              |
| <b>Charge Voltages</b>                                   |                        |              |
| Absorption Voltage - x                                   | 14.4 - 14.8V           | 14.1 - 14.4V |
| Float Voltage - x  | 13.5V                  | 13.5 - 13.8V |
| Equalisation Voltage - x                                 | 16.2V                  | 14.1 - 14.4V |
|  |                        |              |
| <b>Bulk</b>  |                        |              |
| Re-bulk Voltage Offset - x                               | 0.4V                   | 0.4V         |
|  |                        |              |
| <b>Absorption</b>  |                        |              |
| Absorption Duration - (adaptive or fixed) - x            | Adaptive               | Adaptive     |
| Maximum Absorption Time - x                              | 6 Hrs                  | 8 Hrs        |
| Tail Current - x   | 2.0a                   | <3a          |
|  |                        |              |
| <b>Equalisation</b>                                      |                        |              |
| Equalisation Current Percentage - x                      | 8%                     | 8%           |
| Automotive Equalisation - (periodically or disabled) - x | Disabled               | 3 Months     |
| Equalisation Stop Mode - (auto or fixed time) - x        | Auto                   | Auto         |
| Maximum Equalisation Duration - x                        | 1H 0Mins               | 1H 0Mins     |
|  |                        |              |
| <b>Voltage Compensation</b>                              |                        |              |
| Temperature Compensation - x                             | -16mV/ °C              | -25mV/ °C    |
|  |                        |              |
| <b>Battery Limits</b>                                    |                        |              |
| Low Temperature Cut Off - (enable or disable)            | Disable                | Disable      |

Navigate back to home screen and it will save data automatically.

## 2 | Connecting to and setting up the solar charge controller

Finally, you need to connect to the Global Link device that is in the solar box, this is again done via Bluetooth using the Victron Connect app with default pin 000000

Select Change Pin Code and change it to the fleet number provided to the solar assembly – all digits in the fleet number starting with a 0 as it has to be a 6 digit pin number.

Navigate through settings and Product info to find the VRM ID.


The VRM ID needs to be provided to Technical along with the Fleet number it is associated with.

Sometimes it can take a while for the global link to gain connection and provide a VRM ID.

Change the name of this device to match the fleet number provided to the solar assembly including any letters and numbers.

Ensure correct warning label is secured to the inside of the solar lid according

to the setup of the battery details – Yellow Top SRL battery / AGM.

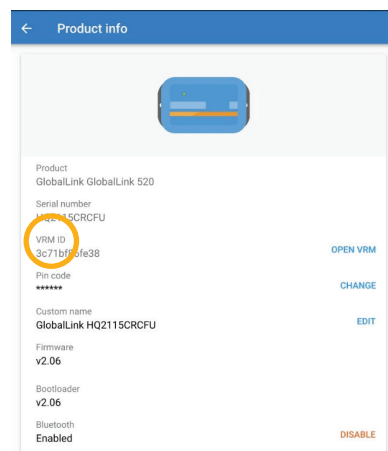

Setup is now complete

# 3 | Version Control

| Document Details |     |       |            |
|------------------|-----|-------|------------|
| Version:         | 1.1 | Date: | April 2026 |

---

For more information and help,  
Email [hire@srl.co.uk](mailto:hire@srl.co.uk) or call us on **0808 2818 775**

